





# PRESSED METAL DRAWERS


## DRAWER HEIGHT ADJUSTMENT

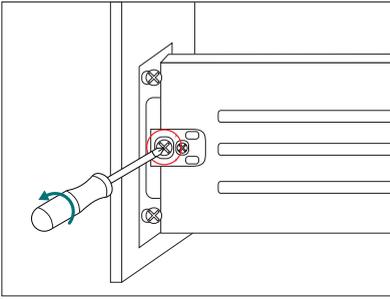

Loosen the front screw.

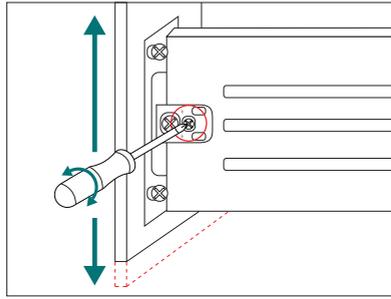


Turn the back screw to adjust the height of the drawer front. Turn anti-clockwise to go up and clockwise to go down.

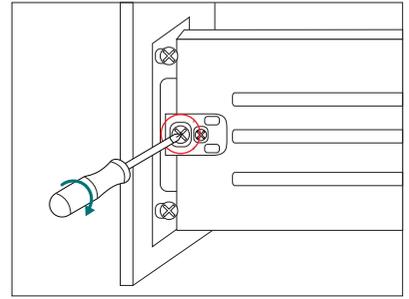


When drawer height is aligned, tighten the front screw. Repeat on both sides of drawer if needed.


## DRAWER LATERAL ADJUSTMENT

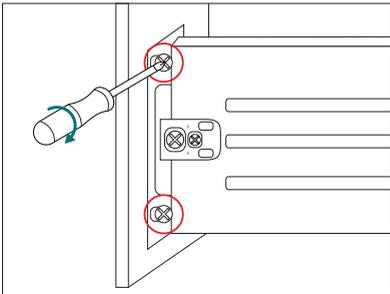

Loosen top and bottom screws on both sides of drawer.

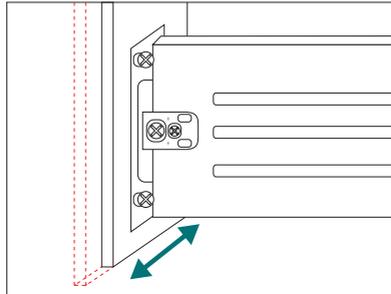


Slide drawer front left or right.

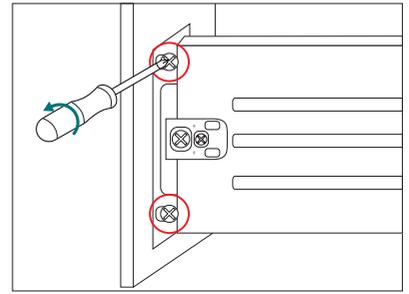

When drawer front is aligned, tighten all screws in place.


## REMOVING & INSERTING DRAWER

### REMOVING

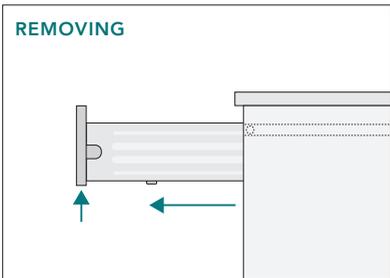


Slide drawer out, lift up and out to remove.

### INSERTING

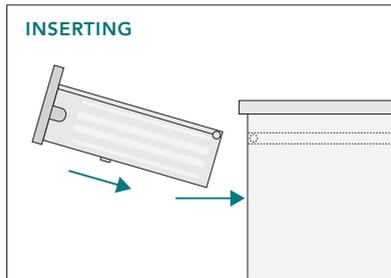

Insert drawer on an angle. Align top of metal sides onto runners in cabinet and push into place.


## DRAWER FRONT REMOVAL AND INSTALLATION

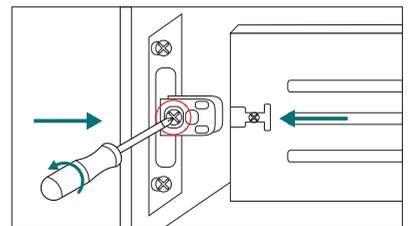

**To remove drawer front:** Loosen front screw on both sides until drawer front comes off.

**To install drawer front:** Align drawer front with sides of drawer and tighten front screw to secure in place.

## TROUBLESHOOTING - HOW TO RE-ENGAGE THE SOFT-CLOSE ADAPTER

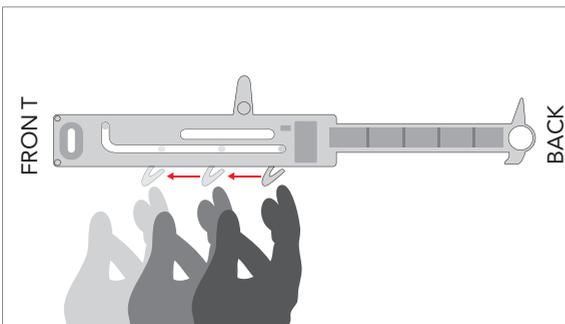

### Soft-close not working?

1. Remove drawer.
2. On inside of cabinet, re-set the trigger by pulling the tab towards the front of the cabinet.
3. Insert drawer and the soft-close should re-engage.

**Note:** If this does not solve the problem, your cabinet may not be level or plumb as there could be an alignment issue.