




# PREMIUM SOLID OR LED FROSTED GLASS DRAWERS


## REMOVING & INSERTING DRAWER

### REMOVING

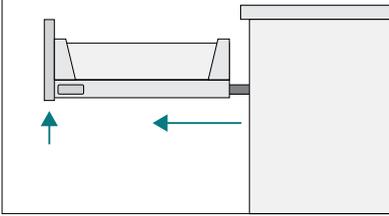

Pull drawer all the way out then lift the front up, a little force is needed to release the drawer from the runner.


### INSERTING

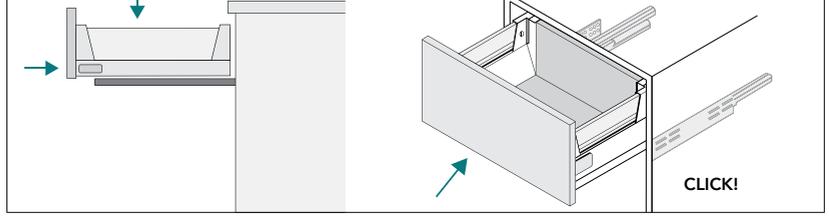

Extend drawer runners out and place drawer on runners and push closed until it is about 2cm out from the vanity. Apply a little extra force on the drawer front (near the bottom of drawer) to push closed


and connect runners in place. The drawer should then be automatically connected to the runner by the two catches. Listen for a click!

## DRAWER HEIGHT ADJUSTMENT

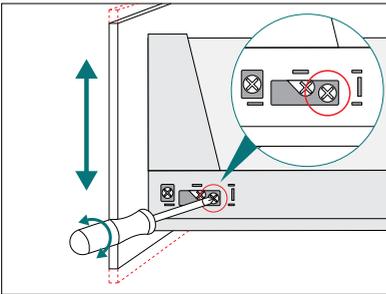


Remove ADP cap to access screws. Turn the back screw to adjust the height of the drawer front. Turn clockwise to go up and anti-clockwise to go down.

## LATERAL ADJUSTMENT

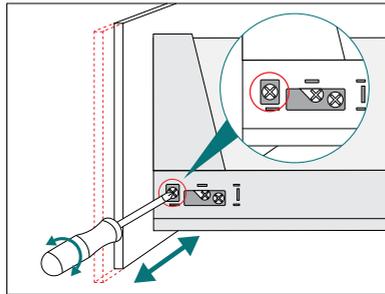

To move drawer front to the right, turn right screw clockwise and left screw anti-clockwise. Turn the opposite way to move to the left.


## TILT ADJUSTMENT

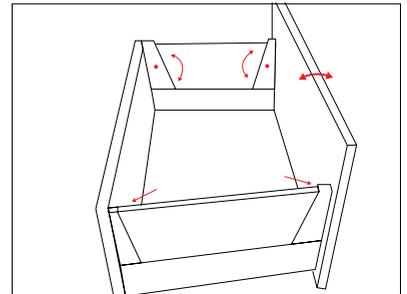

To tilt drawer front, turn adjustment screws on inside of drawer at the front and back, on both sides.

## DRAWER FRONT REMOVAL AND INSTALLATION


First you will need to remove the Solid or LED drawer side:

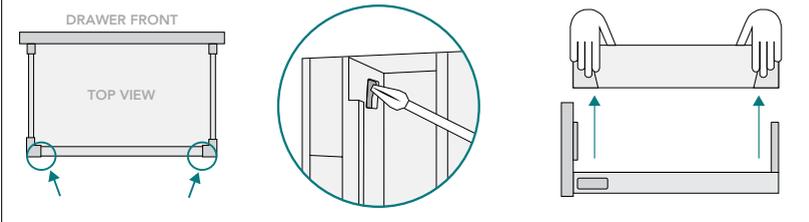


Identify plastic lugs - lugs are at the back of the drawer on each side at the top.

With a screw driver push into the lug to release the side and start pulling up.


Pull the drawer side up and off with both hands, sliding off the fixing brackets. Repeat on both sides.

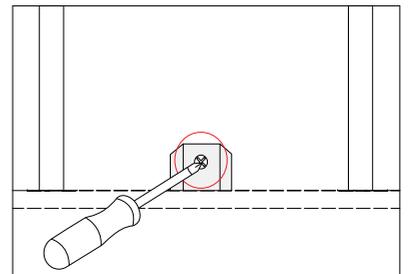


Depending on width of drawer you may need to unscrew and remove middle bracket on the under side of the drawer.

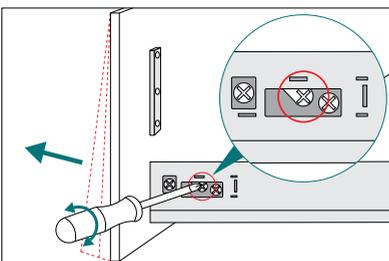

**To remove drawer front:** Turn centre screw and pull drawer front forwards. Repeat on other side.

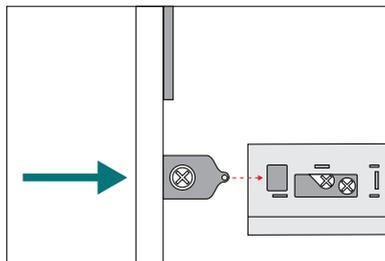

**To replace drawer front:** Align front panel with drawer sides, apply some pressure at the bottom on both sides and push in to secure.

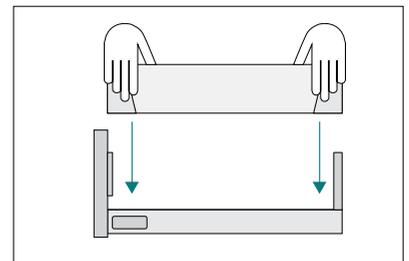


Slide the drawer sides down onto the fixing brackets until the lug secures side in place. Repeat on both sides.




# BATTERY PACK INSTALLATION



## BATTERY PACK INSTRUCTIONS FOR LED FROSTED GLASS DRAWERS AND DELUXE LED CLEAR GLASS DRAWERS

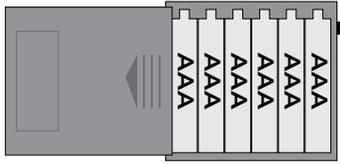

6 x AAA batteries are required for the battery pack. Slide the cover plate off, insert batteries and slide cover plate back on.

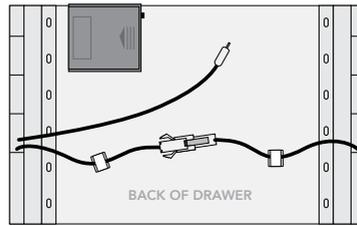

 On the back of the drawer attach the supplied battery pack on the top left hand side over the back panel.

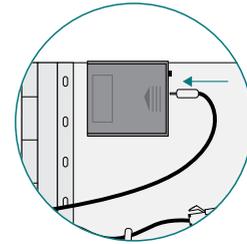

Plug the cord into the side port of the battery pack. Turn the switch to the 'ON' position. The LED lights in the drawer sides should switch on.