
Harper Floor Mount Installation Guide




ATTENTION: VANITY MUST BE SECURED TO WALL. PLEASE USE GUIDE IN CONJUNJTION WITH GENERIC INSTALLATION BOOKLET.

1

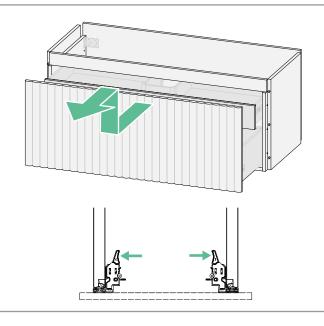

Remove all drawers from vanity by squeezing both levers in on the underside of the drawer, at the same time (to activate release) and pull drawer out to remove.


2

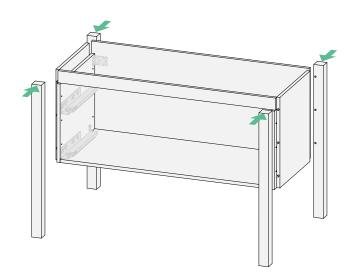

Align the legs with the dowels in the vanity end panels and lightly tap them into place ensuring a snug fit.


Note: You many want to carefully flip the vanity upside down to make this step easier.

3

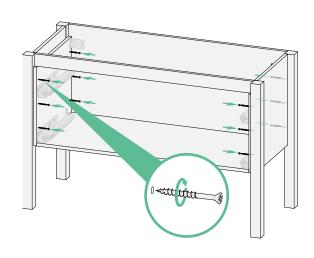


Using the provided 40mm Hospa screws, screw through the holes in the vanity ends, into the legs to secure into place.

4

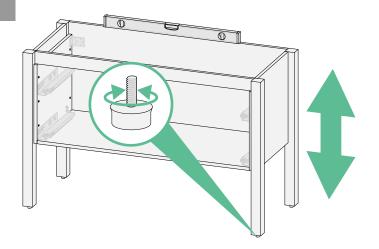

Align vanity to wall and use the adjustable feet to level, using a spirit level to ensure levelling is correct.

5

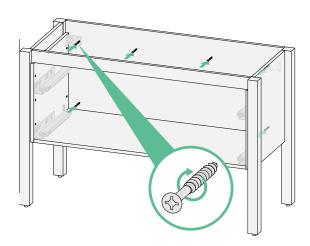

Securely fasten the vanity to the wall through back of vanity with appropriate screws/bolts at TOP and BOTTOM of cabinet. Fix the cabinet through the top left and right hand brackets and evenly space apart the horizontal fixings at a maximum of 300mm apart. For the bottom start the fixing points no further than 100mm from each end of the cabinet and no higher than 50mm from the base panel.

Note: Where a stud or support beam cannot be located, use an appropriately sized hollow wall anchor. Vanity must attach to a minimum of two support beams. Ensure fixings clear all water/electrical services in wall.

6



Finish installation using supplied generic installation booklet.

Please ensure that all steps in this guide are followed in conjunction with the supplied generic installation guide steps to guarantee correct installation of vanity.